



2006 OWNER'S MANUAL SUPPLEMENT FOR THE MILITARY 4X4

SUPPLEMENT TO THE 2006 CARRYALL 294 VEHICLE OWNER'S MANUAL

The following pages are supplemental to the 2006 Carryall 294 Gasoline and Diesel Vehicle Owner's Manual. This supplement documents only those sections of the manual describing features specific to the 2006 Military 4x4 model vehicle. All other information in the owner's manual pertaining to the Carryall 294 vehicle applies to the Military 4x4 model as well. The placement of sections in this supplement corresponds to the placement of sections in the manual. If you do not have a 2006 Carryall 294 Vehicle Owner's Manual, you may obtain one from your Club Car dealer or distributor.

NOTICE

This supplement should be used in conjunction with the 2006 Carryall 294 Vehicle Owner's Manual.

This manual contains proprietary information that is protected by copyright. All rights are reserved. No part of this supplement may be photocopied, reproduced, or translated to another language without the written consent of Club Car, Inc. Club Car is not liable for errors in this supplement or for incidental or consequential damages that result from the use of the material in this supplement.

The information contained in this document is subject to change without notice.

Club Car reserves the right to make design changes to either gasoline or electric vehicles without obligation to make these changes on units previously sold.

The Club Car Limited Warranty for Carryall 294 vehicles appears at the end of the owner's manual. No other warranties, express or implied, are contained herein. Your authorized representative checked this vehicle before it was delivered to you and will provide you a copy of the completed vehicle warranty registration form.

These vehicles do not conform to Federal Motor Vehicle Safety Standards for automobiles or to FMVSS 500 for low-speed vehicles, and are not designed or equipped for use on public streets, roads, or highways.

This supplement effective December 12, 2005.

Copyright © 2005 Club Car, Inc.

TABLE OF CONTENTS

Safety Details	2
Controls and Indicators	3
Loading and Unloading	4
Transporting Vehicle	5
Tires	5

SAFETY DETAILS

WARNING

- **This supplement and the 2006 Carryall 294 Vehicle Owner's Manual should be read completely before attempting to operate or service the vehicle. Failure to heed the warnings or follow the instructions in this supplement and in the manual could result in property damage, severe personal injury, or death.**

See the 2006 Carryall 294 Vehicle Owner's Manual for additional safety details.

CONTROLS AND INDICATORS

Controls and indicators for the Military 4x4 vehicle are the same as described in the owner's manual for the Carryall 294 vehicle except for the ignition and light switches.

IGNITION SWITCH

The keyless ignition switch (1) is mounted on the instrument panel to the right of the steering column (**Figure 1**). It has four positions: PREHEAT, OFF, ON, and START. To preheat glow plugs in cold weather, turn the switch to the PREHEAT position and hold for 10-15 seconds. Then turn the switch all the way to the START position and hold until the engine starts. If the engine does not start after 10-15 seconds, return the switch to the OFF position and repeat procedure. Once the engine starts, release the switch and it will return to the ON position. The engine will idle in neutral. The engine will continue to idle until the switch is turned to the OFF position.

Turn the switch to PREHEAT position if the temperature falls below 23°F (-5°C). Do not hold the switch in the PREHEAT position longer than 20 seconds.



Figure 1 Instrument Panel

LIGHT SWITCH

The light switch (2) is located on the left side of the instrument panel below the fuel gauge/hour meter (**Figure 1**). It has three positions: HEADLIGHTS ON, OFF, and BLACK-OUT ON. Place the switch in the HEADLIGHTS ON position to activate headlights. Place the switch in the BLACK-OUT ON position to activate the black-out lights. The headlights and black-out lights will not function simultaneously.

NOTE: Using the lights for extended periods of time without the engine running, or with the engine idling, will discharge the battery.

LOADING AND UNLOADING

⚠ WARNING

- Do not exceed the rated capacity of the vehicle. Overloading can affect vehicle handling or cause component failure, resulting in loss of control of vehicle and possible severe personal injury.

See the owner's manual for all other Loading and Unloading warning statements.

The Military 4x4 is equipped with bed tie-downs to secure cargo. Center and secure cargo with bed tie-downs as far forward as possible in the cargo bed. Do not overload the vehicle.

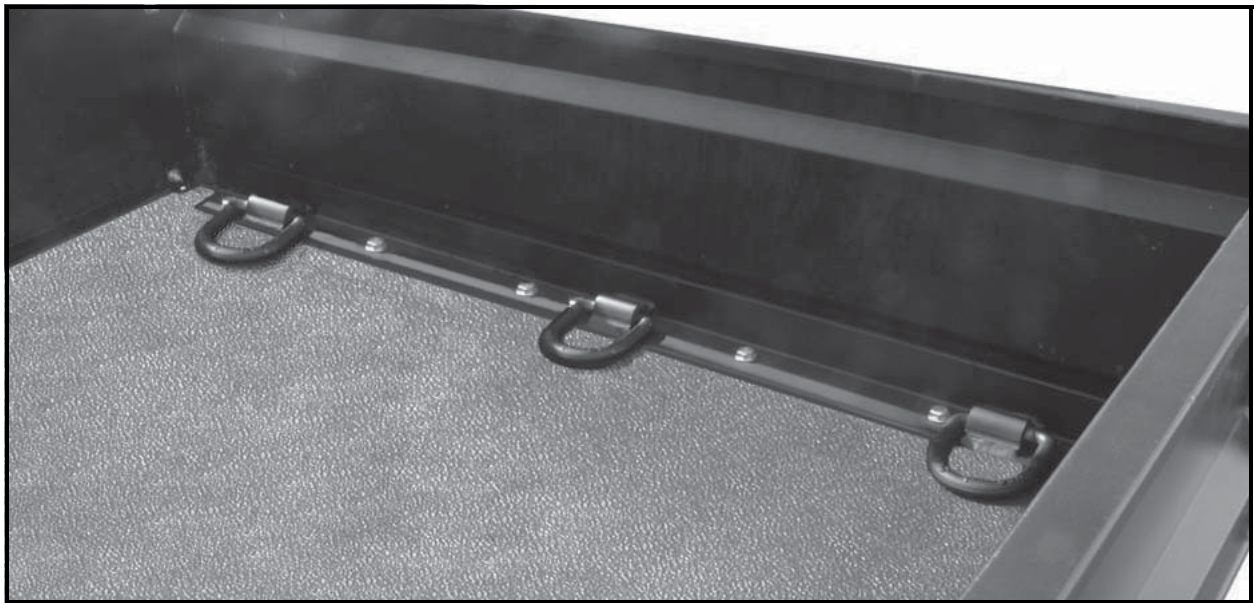


Figure 2 Bed Tie-Downs

TRANSPORTING VEHICLE

The Military 4x4 is equipped with vehicle tie-downs for use when transporting the vehicle. Secure vehicle using front and rear tie-downs.

⚠ WARNING

- The vehicle tie-downs are not intended for use as a lifting device. This vehicle is not equipped with any lifting provisions.

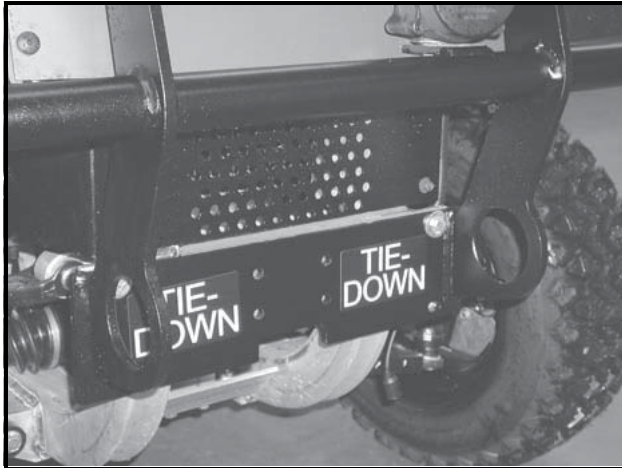


Figure 3 Front Vehicle Tie-Downs



Figure 4 Rear Vehicle Tie-Downs

TIRES

The Military 4x4 is equipped with foam filled tires. They require no maintenance.

