



CLAYS BASKET

WILL FIT E-Z-GO® S4® & TXT®
INSTALLATION INSTRUCTIONS
KIT# 04-060

INCLUDED:



(04-036) Left and Right Brackets



Clays Basket (04-020)
Sold Separately

NOTICE: Any modifications to these products will void the warranty. Any damages that occur to the vehicle as of modifying this product is the sole responsibility of the installer.

E-Z-GO TXT




 Tool Required: 1/2" Socket

1
Begin on one side by removing the top bolt only then back the lower bolt out about half way.

NOTE: Install one side at a time.

E-Z-GO S4

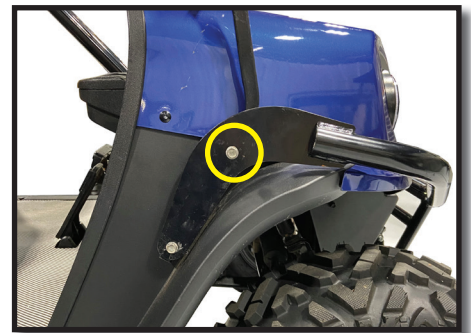

 Tool Required: 1/2" Socket

2
Slide slotted end over the lower bolt. Line up the top bolt with the brushguard and retighten. Repeat on the other side.

NOTE: See bracket orientation on pg 2.




E-Z-GO TXT




E-Z-GO S4



ATTENTION: Ensure that the flat edge of the mounting bracket is facing the inside of the cart as shown.

 Tool Required: 13mm Socket and Wrench

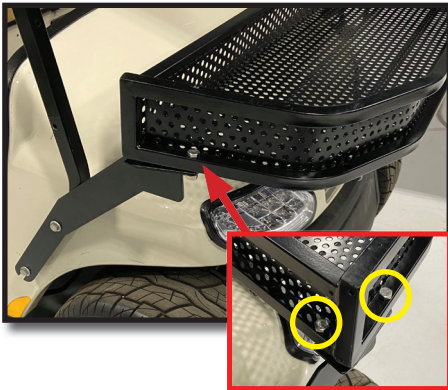

Attach clays basket to brackets on both sides using hardware pack provided.



INSTALLATION COMPLETE

HARDWARE PACK

- 4 - 8mm X 40mm Hex Head Bolts
- 8 - 8mm Flat Washers
- 4 - 8mm Nylock Nuts